

SET-UP

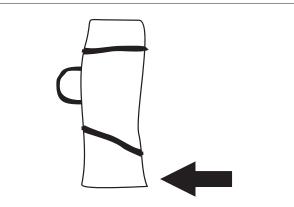


1. Place the tent in an upward position



2. Remove the bag and protective foil

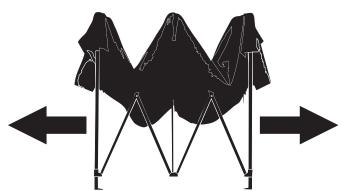


3. Grasp the lower "V shape" at the center; lift and pull (frame half way out)

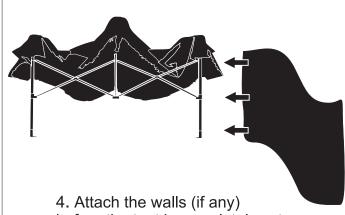


before the tent is completely set up



5. Push the leg socket over button on each leg

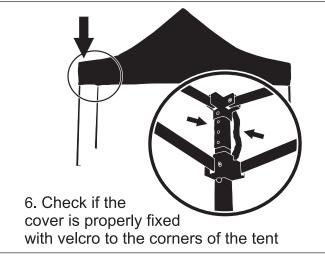

7. Adjust the tent legs at the desired height

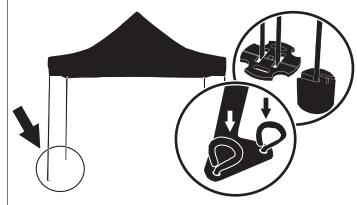

8. Secure the tent legs with pins or bases

